








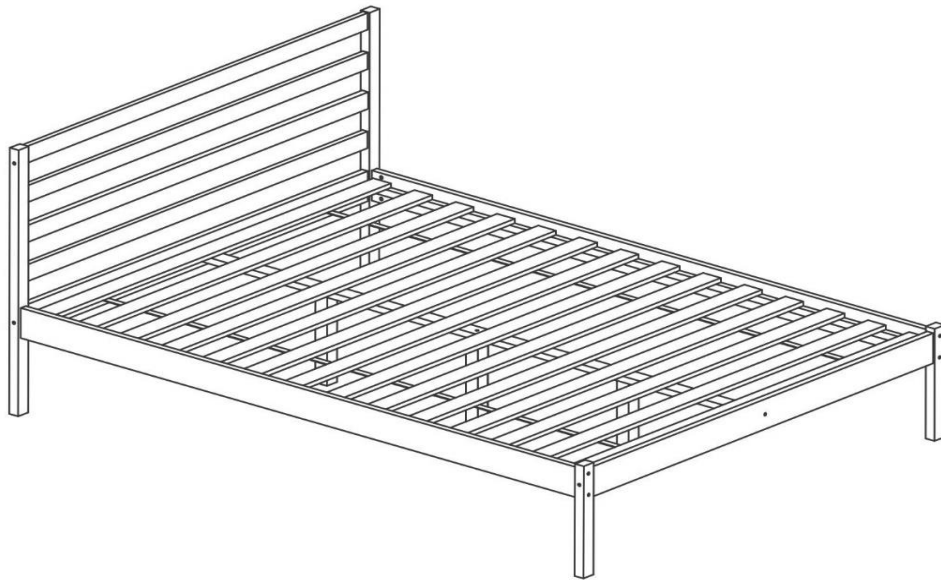

ASSEMBLY INSTRUCTIONS


Maxwell Double Wooden Bed In A Box (4ft 6)




HARDWARE

A x28  Wood Dowel Φ8x30mm	B x1  Allen Key M4	C x8  Bolt Φ6x70mm	D x8  Bolt M6x65mm	E x8  T-Nut
F x28  Screw Φ4x25mm	L x3  Bolt Φ6x50mm	I x1  Screw Driver (not provided)		


COMPONENTS

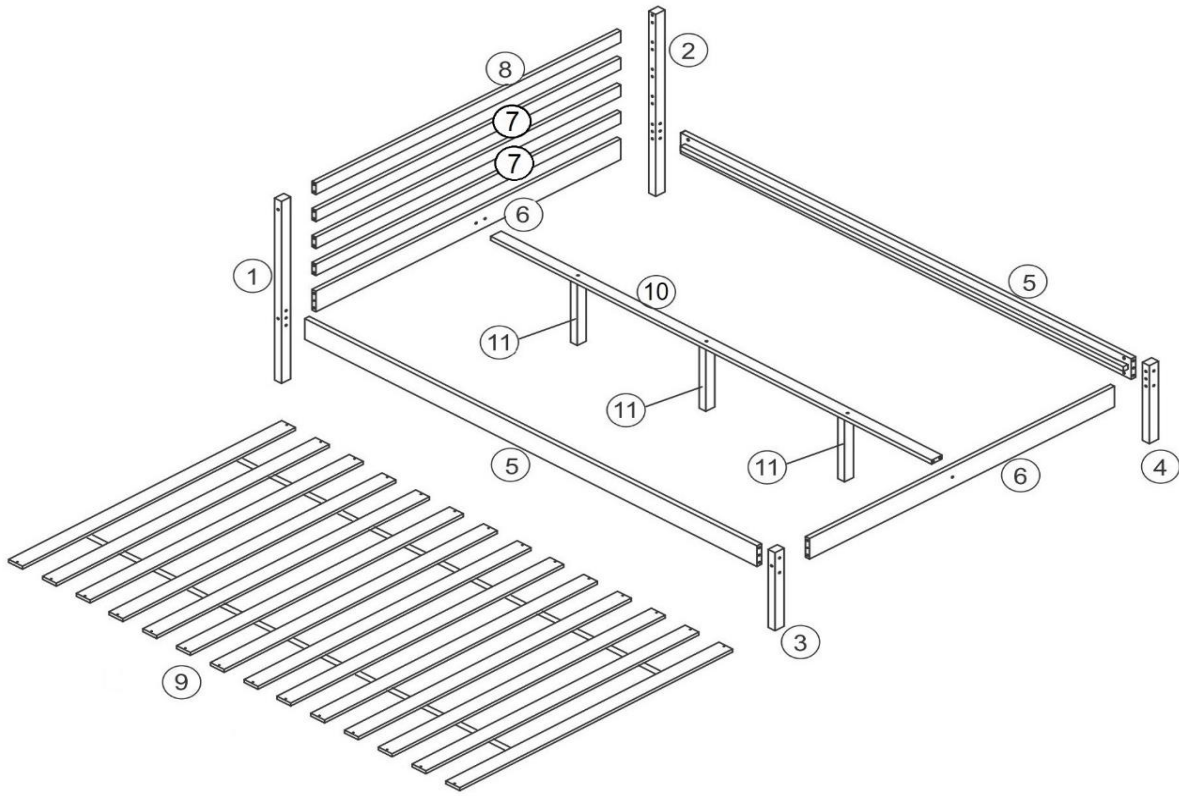

STEP 1

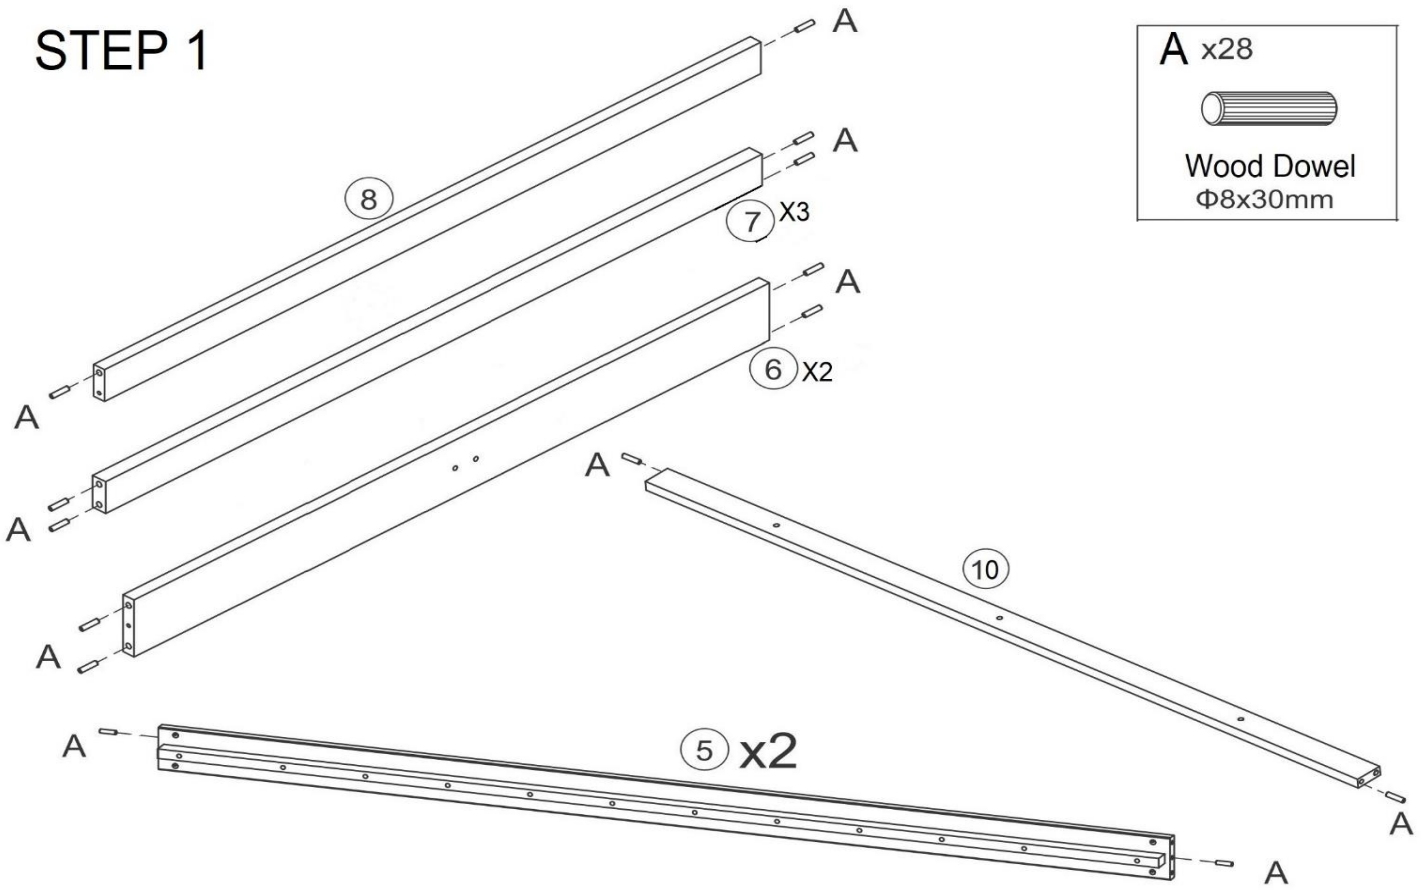


STEP 2

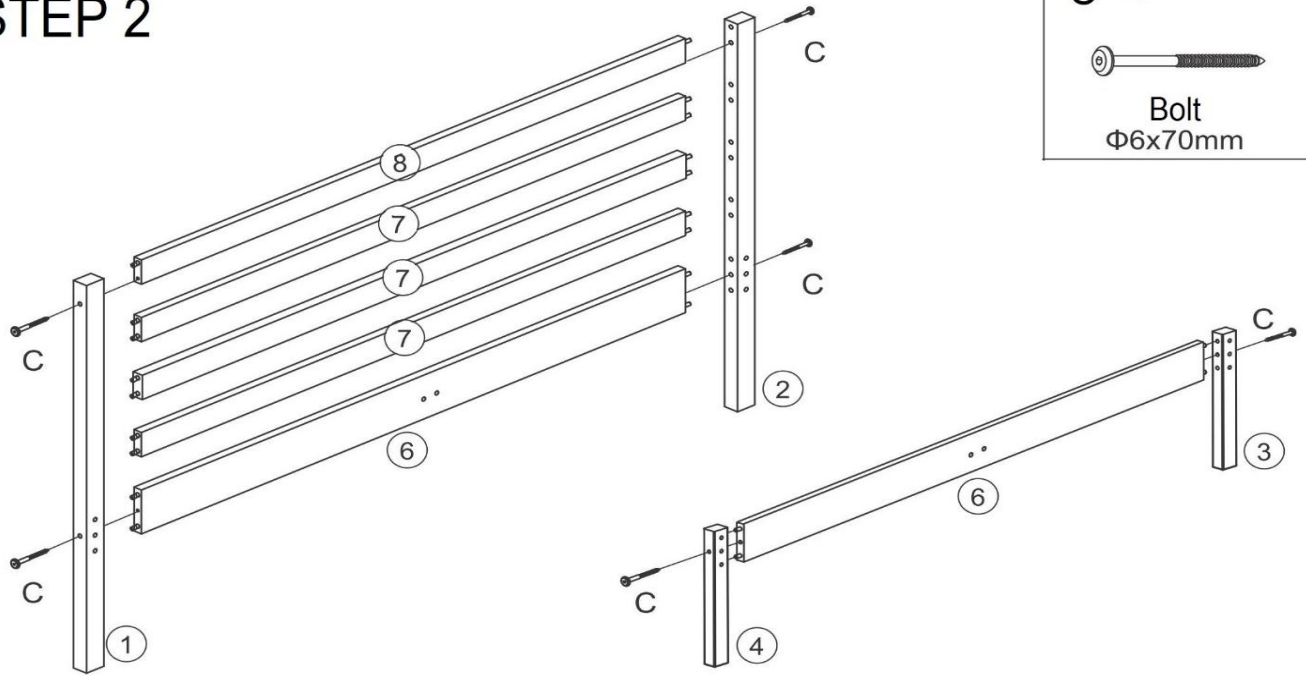

STEP 3

C x2 Bolt Φ6x70mm	D x8 Bolt M6x65mm	E x8 T-Nut
--------------------------------	--------------------------------	----------------------

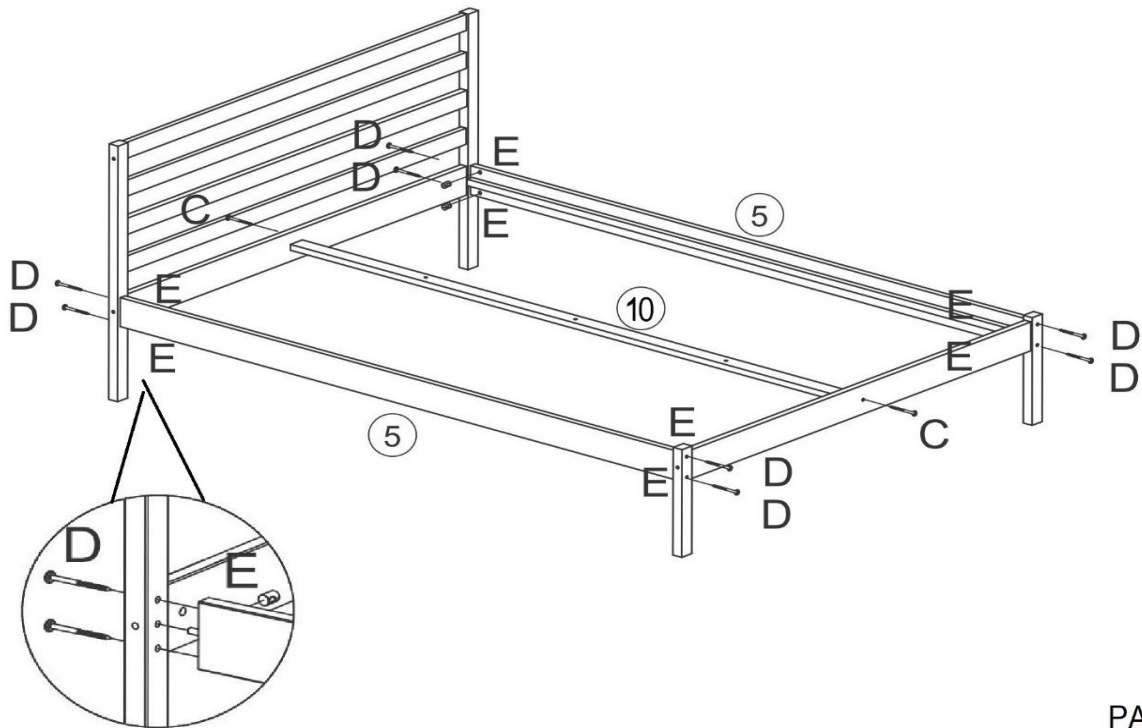


STEP 4

L x3



Bolt
Φ6x50mm

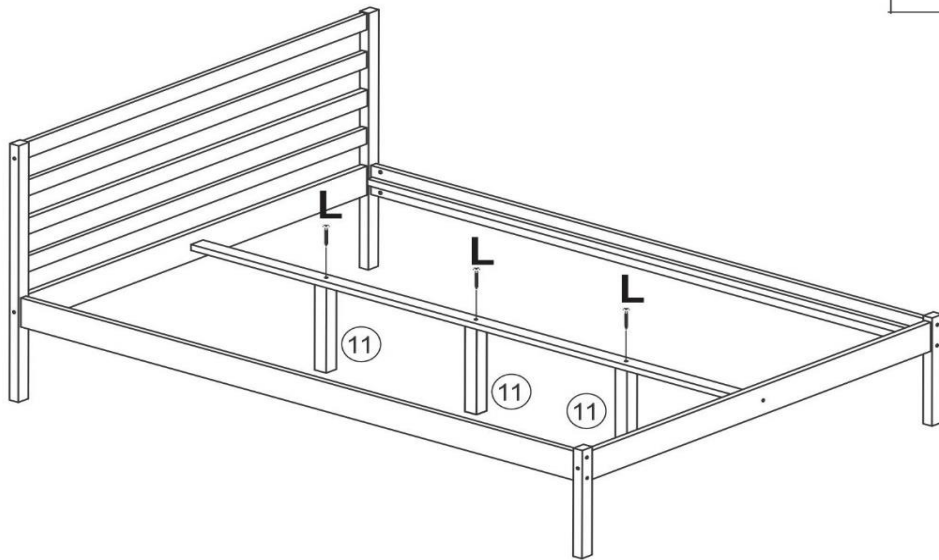

STEP 5

F x28



Screw
Φ4x25mm

