






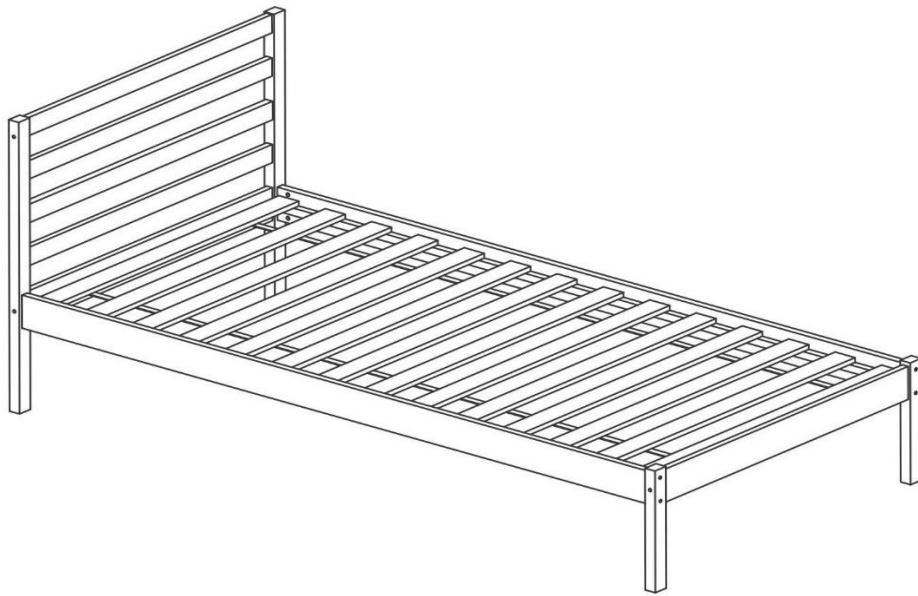


ASSEMBLY INSTRUCTIONS


Maxwell Single Wooden Bed In A Box (3ft)




HARDWARE

<p>A x26</p>  <p>Wood Dowel Φ8x30mm</p>	<p>B x1</p>  <p>Allen Key M4</p>	<p>C x6</p>  <p>Bolt Φ6x70mm</p>	<p>D x8</p>  <p>Bolt M6x65mm</p>	<p>E x8</p>  <p>T-Nut</p>
<p>F x28</p>  <p>Screw Φ4x25mm</p>	<p>I x1</p>  <p>Screw driver (Not Provided)</p>			


COMPONENTS

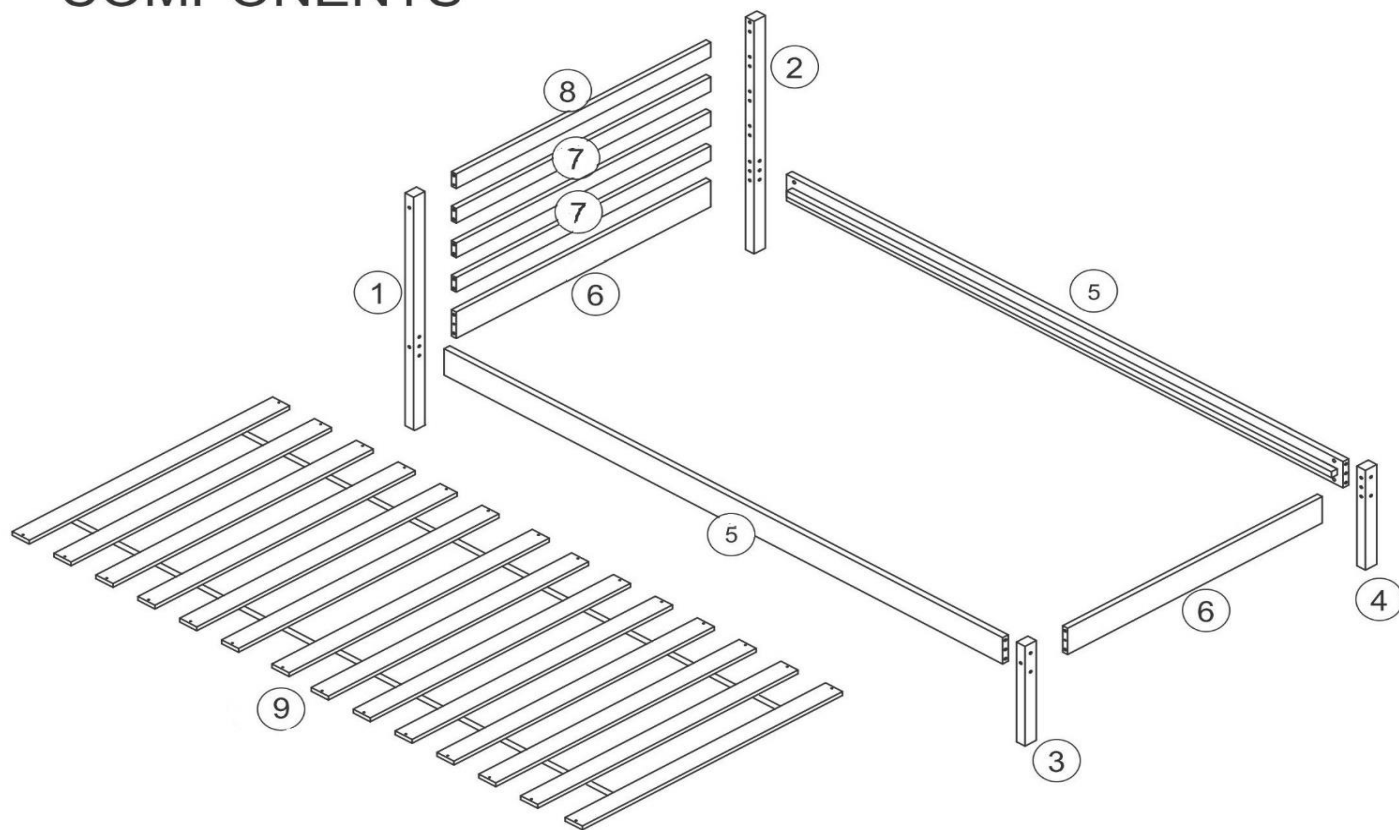


Step 01

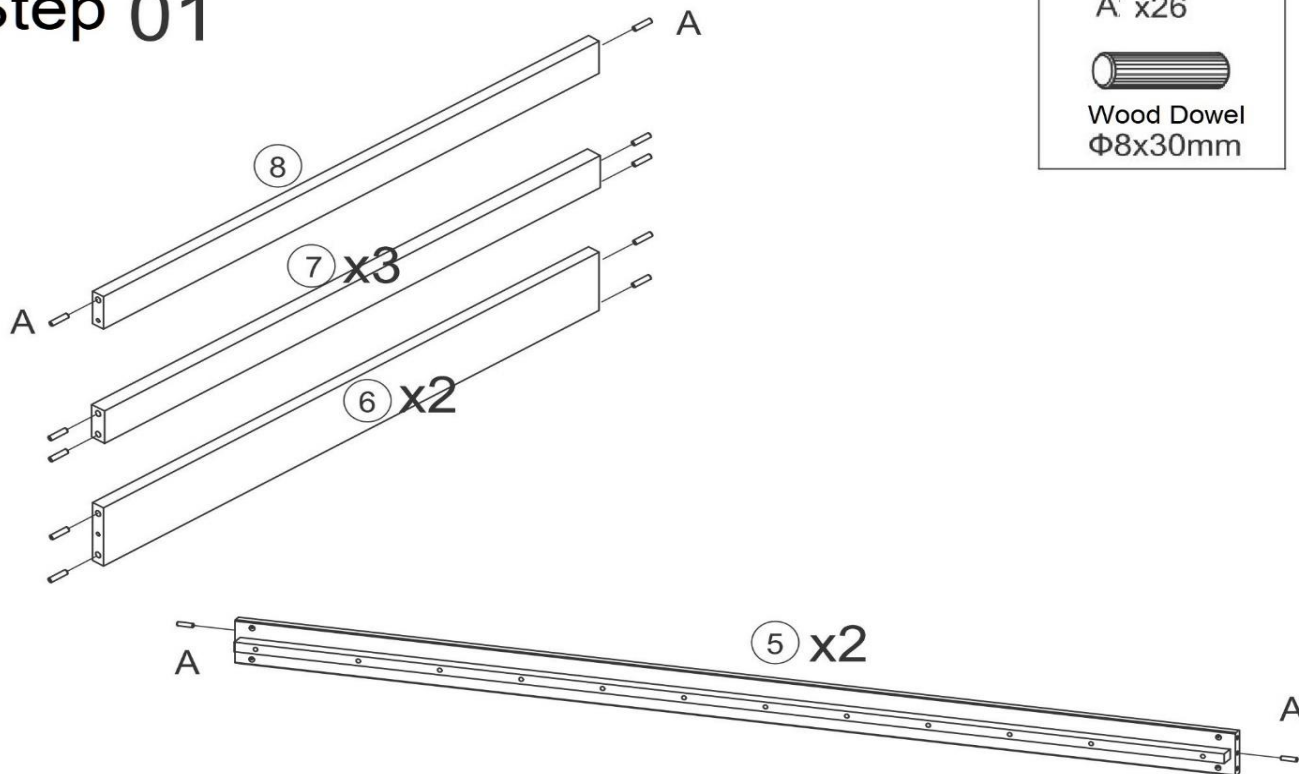

Step 02

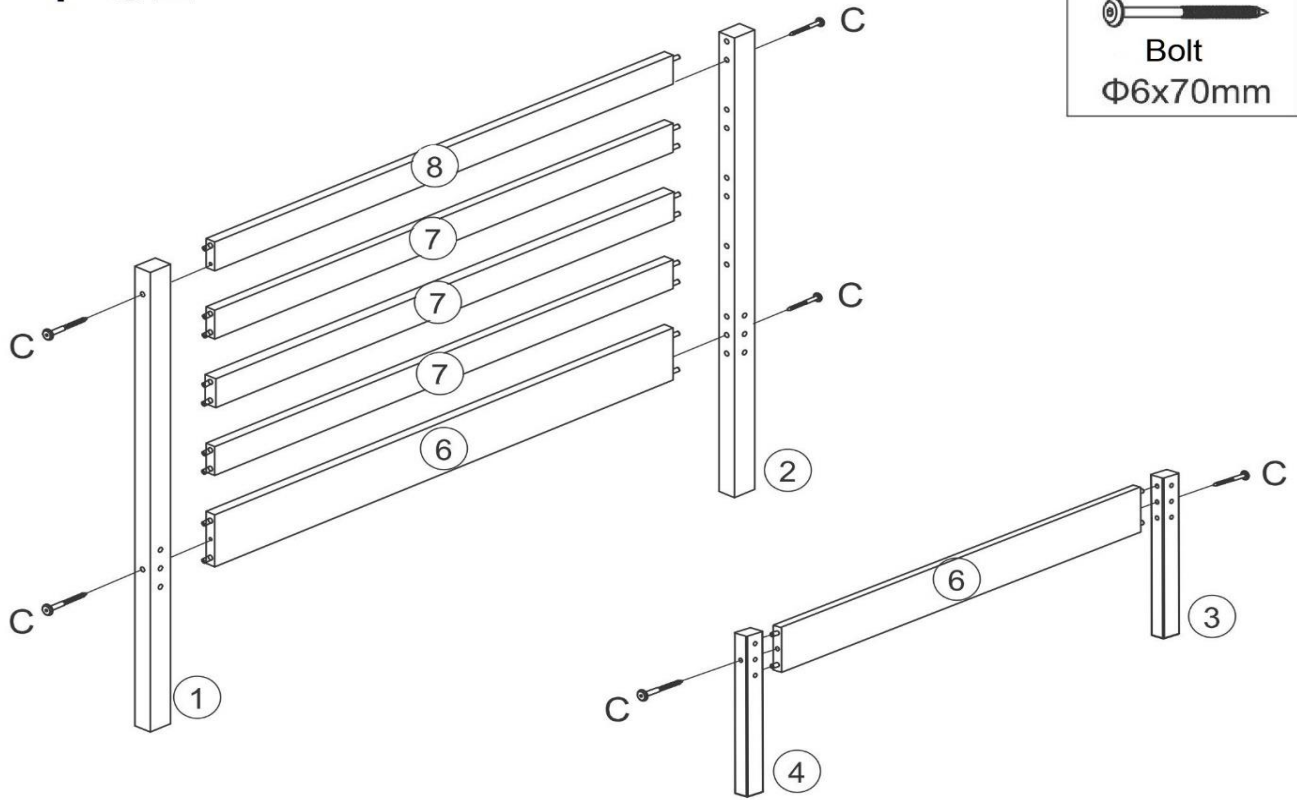

Step 03

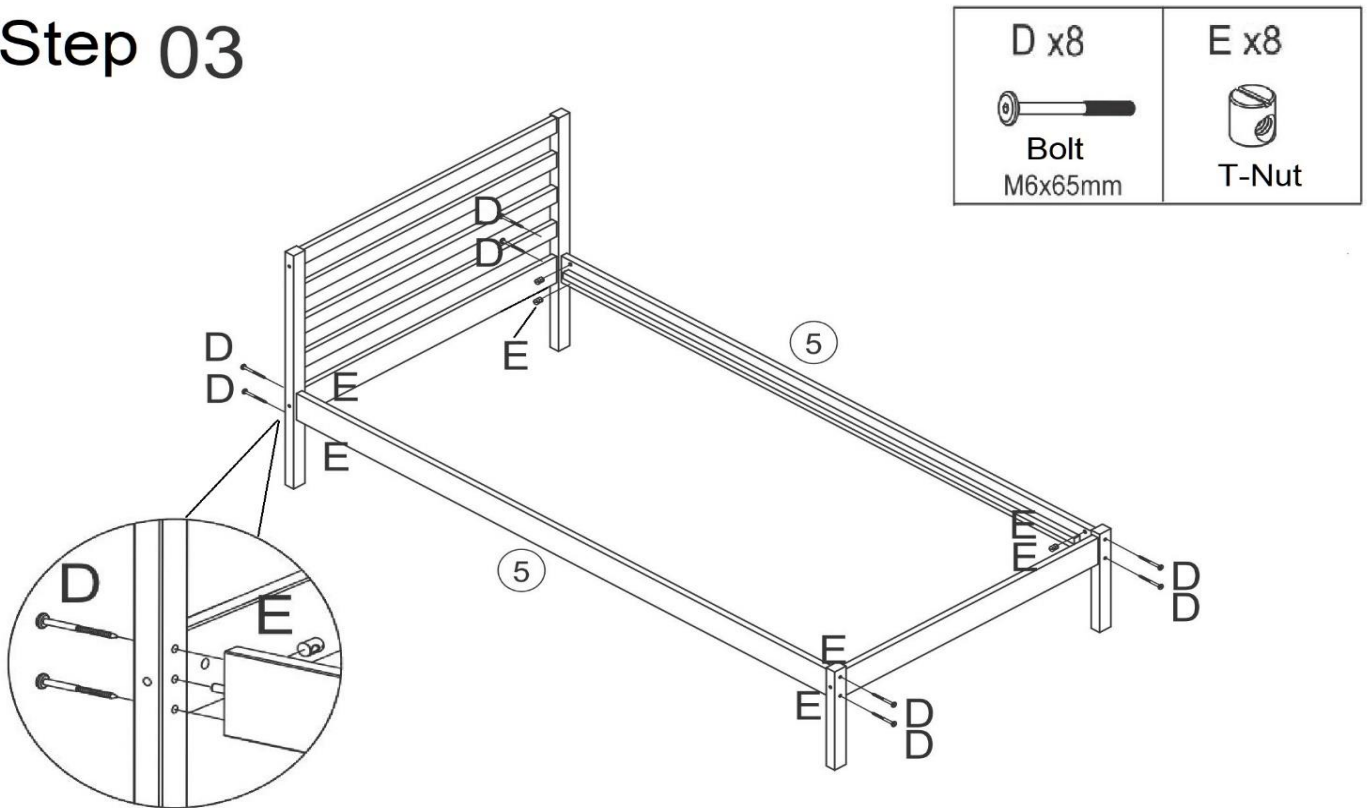

Step 04

F x28

Screw
Φ4x25mm

Assembly Complete

