


MODEL :METAL POST / SPRUNG WOOD BED BASE

SIZE :SMALL DOUBLE / DOUBLE / QUEEN / KING SINGLE / KING BED


ASSEMBLY INSTRUCTION

Part List							Hardware							
HEAD BOARD 1 pc	FOOT BOARD 1 pc	SIDE RAIL 2 pcs	SIDE CROSS RAIL 2 pcs	CENTRE RAIL 1 pc	CENTRE CROSS RAIL 2 HOLE 1 pc	SPRUNG WOOD 24 pcs	SINGLE CONNECTOR 24 pcs	DOUBLE CONNECTOR 12 pcs	M6 X 45mm 2 pcs	M6 X 40mm 6 pcs	M6 X 20mm 8 pcs	M6 HEX NUT 4 pcs	SPANNER 1 pc	ALLEN KEY M4 1 pc


Step 1

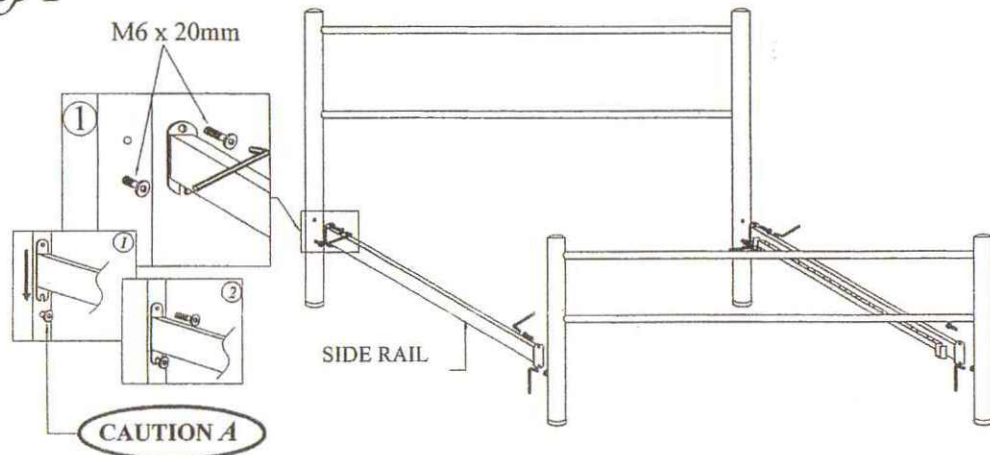


Step 3

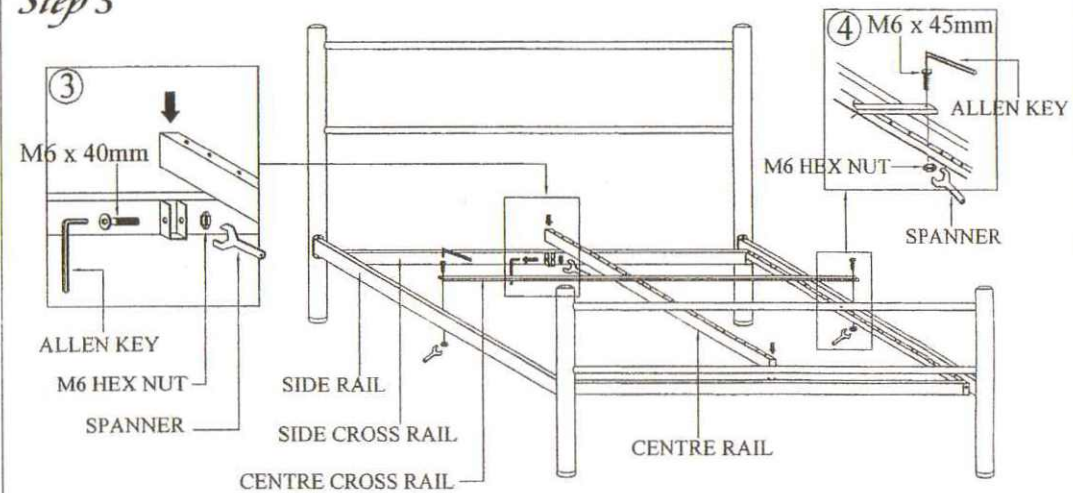

Step 2

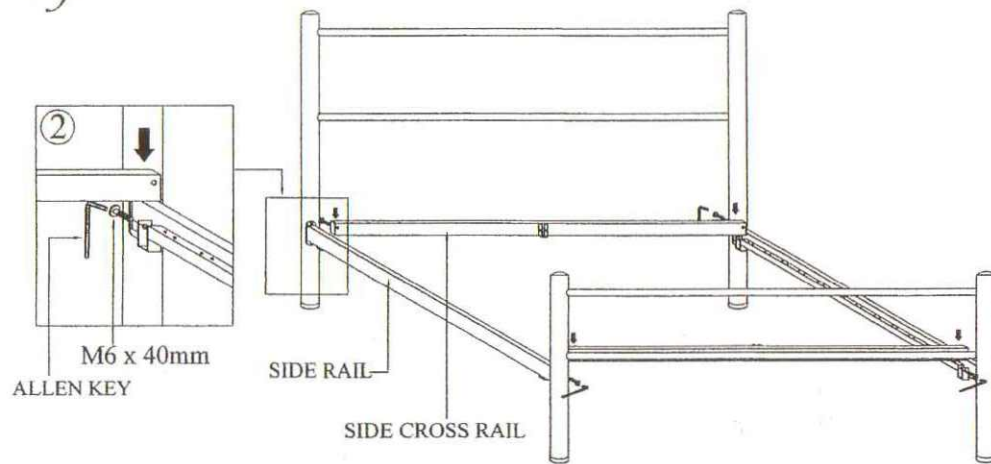

Step 4

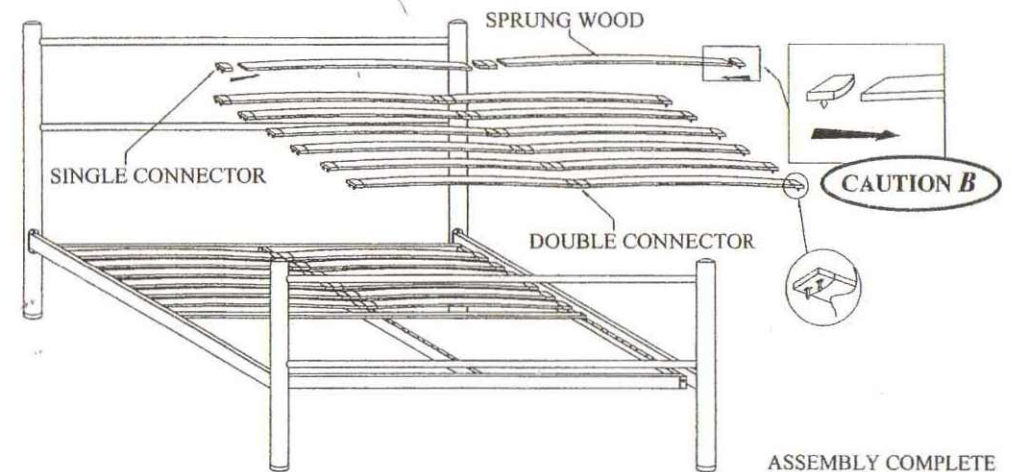

A

CAUTION!
Do not tight screw, left around 5mm before completely assembled.

B

CAUTION!
Make sure sprung wood is fully push tightly into single connector, if not by slowly knock single connector until tight into sprung wood.

IMPORTANT!

*Tighten all screw and complete product as shown
*Ensure cross rails are located in the side rails before placing the mattress on the bed frame!